


ASSEMBLY INSTRUCTION

EAC
DC-2226

1

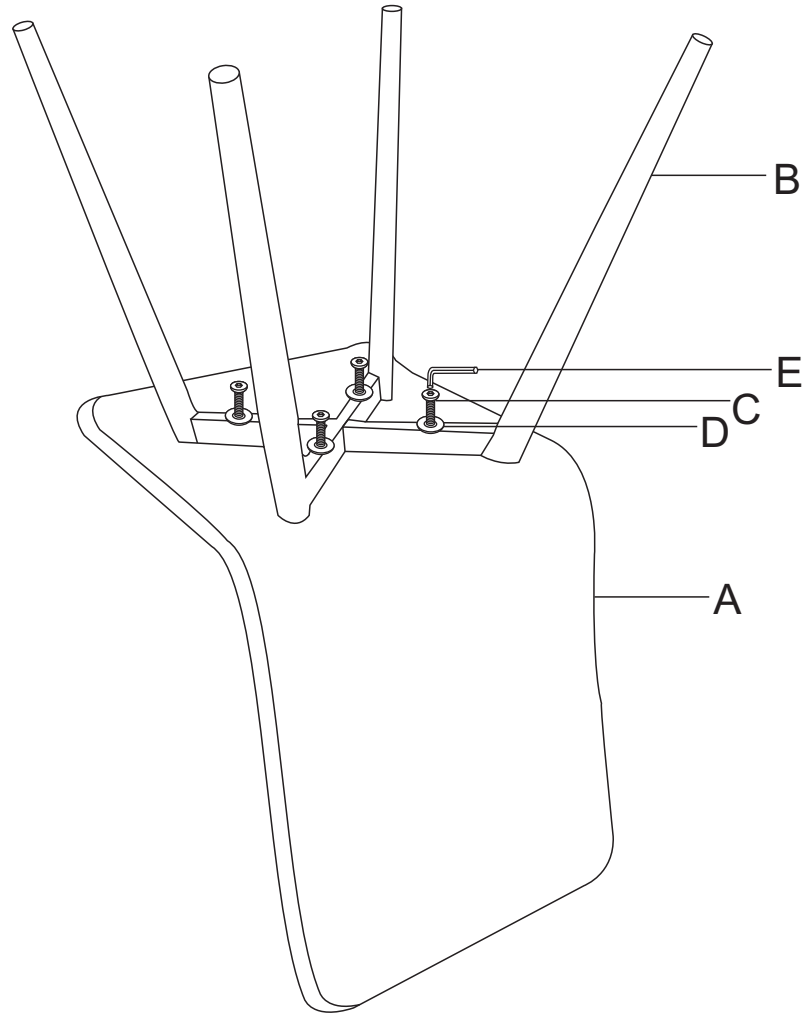

2



Ax1



Bx1



Cx4



Dx4



Ex1

